
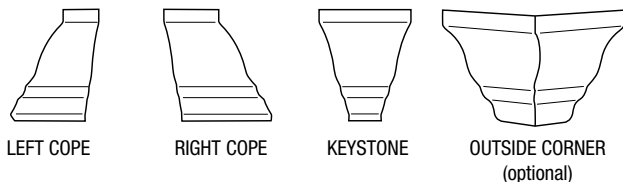


Pro-Fit Mouldings are the easy and affordable way for the do-it-yourself homeowner to add professional looking crown mouldings to any room. In as little as a few hours, with a few hand tools, you can transform any room into a spectacular room with beautiful architectural details. No miter cuts or complicated measuring is needed.

Pro-Fit Mouldings

- Install with everyday hand tools
- Require no miter cuts
- No painting or finishing needed
- Can be installed by one person
- Fool proof system hides less than perfect cuts
- Available in kits or custom lengths
- Can be removed for wallpaper or painting and reinstalled
- Allows space behind the moulding for electrical or speaker wiring. Can be added before moulding is snapped into place or moulding can be removed and reinstalled.

Kit contents

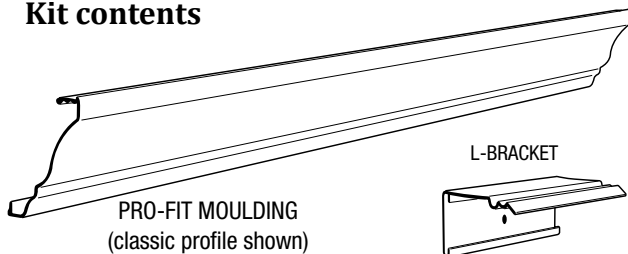

Pro Fit
MOULDINGS

*Beautiful Crown Mouldings...
in a Snap!*

1219 Flynn Road · Suite 206
Camarillo, California 93012
805.484.8013 · Fax 866.977.3926
Toll Free: 888.977.3926
pro-fitmouldings.com

U.S. PAT #7,451,574



*“...beautiful
crown moulding
I installed myself
in less than a day!”*



The revolutionary new
crown moulding system
that you can install yourself,
with only a few tools, and get
professional results.

Pro Fit
MOULDINGS

*Beautiful Crown Mouldings...
in a Snap!*

Pro-Fit Mouldings are a revolutionary crown moulding system that makes it easy for just about anyone to install crown mouldings in their home. With just a few simple tools, you can transform a humble room into one with timeless architectural details usually only found in today's custom homes. Imagine, the look of expensive fine craftsmanship can now be yours. And at an affordable cost.

Pro-Fit Mouldings are made from PVC vinyl with a durable smooth finish. In addition PVC is easy to cut and is flexible enough to ensure a good fit to walls that are not perfectly straight.


The mouldings come colored from the factory, eliminating any finish work. You simply cut to rough size and snap the mouldings onto the brackets. The corner pieces snap into place over the long sections hiding any less than perfect cuts. Once in place, the job is done. No painting, puttying or finish sanding. A 12' x 12' room can be completed in about 2 hours.




You can use common hand tools or power tools, such as screw gun, electric saw.

Installing Pro-Fit Mouldings only require a few simple steps. Our system just about guarantees a professional looking job.


1. Starting at the center of the wall, install the brackets at no more than 24 inches apart with the screws provided. The brackets should touch the ceiling.

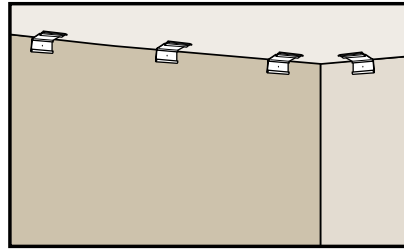


2. Measure from the center bracket to the next wall and cut moulding 1" short.

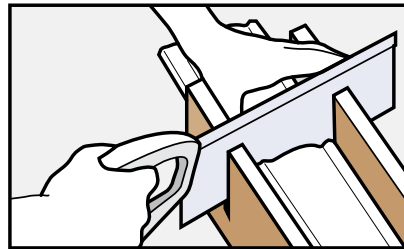


3. Snap the Right Cope onto the right end of the moulding allowing the right cope to extend 3/4" past moulding end.

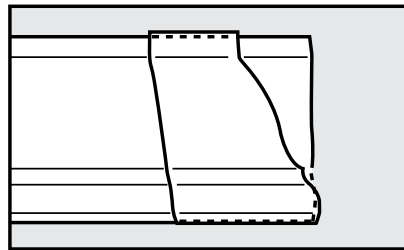

4. With the Right Coping on the end of the moulding touching the next wall, snap moulding into place over the brackets.

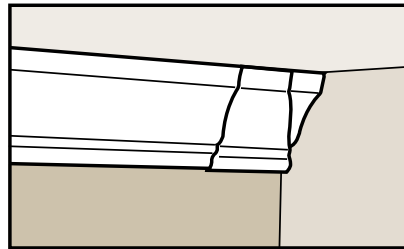

5. Cut the second moulding. Snap on the Left Coping at the end of the moulding and snap moulding into place over brackets. Continue around room with same procedure.

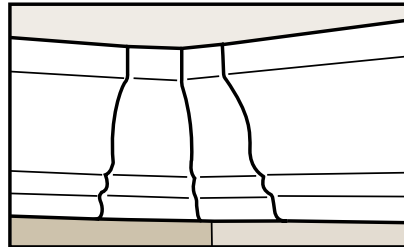

The Pro-Fit EZ Kits contain everything you need for a 12' x 12', 16' x 16' or 6' x 8' room



Left and right copes come together to form a perfect inside corner



Keystone installs at the center of the wall corner



Outside corners are also available